


tuoi

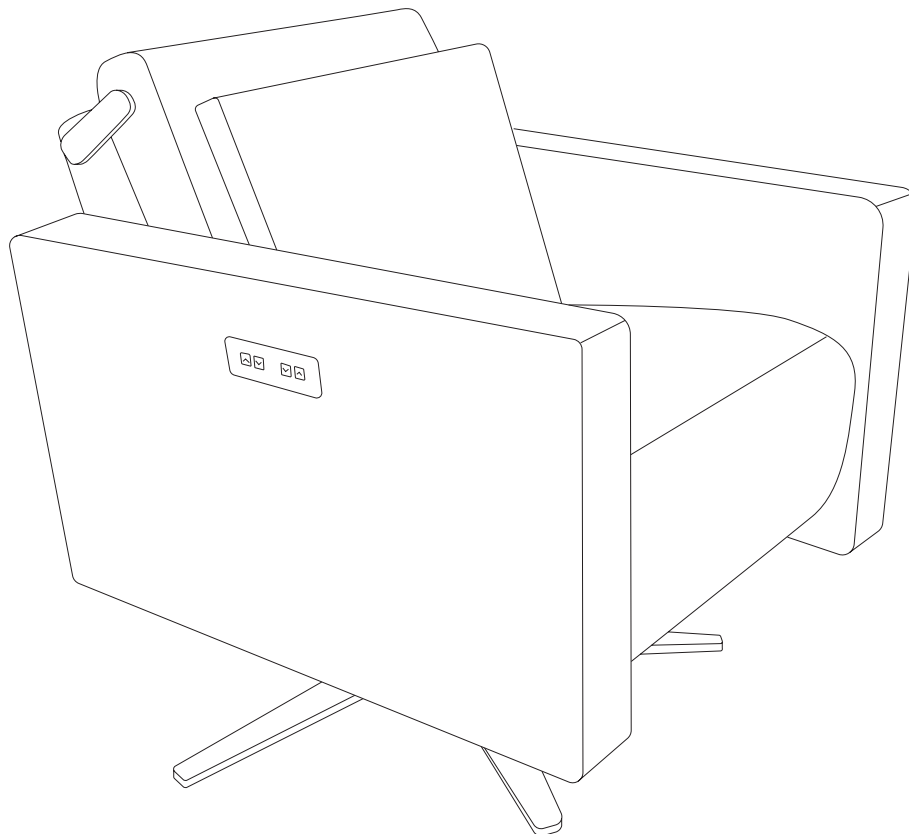

Pause

User Manual

Pause lounge chair

Comfortable sitting in design furniture? Pause takes the art of relaxing to an unprecedented level. This sublimely designed one-seater combines a timeless cubist design with an all-in-one lounge chair. Discover this beautiful piece of craftsmanship.

Minimalist look

At Tuoi, we put design first, while ensuring ultimate sitting comfort. The sleek, timeless Pause conveniently responds to this need. You can easily convert this high-backed reclining chair into a trendy club chair or turn it into a lounge chair to relax in after a busy day.

Personalise your design lounge chair with fabric or (artificial) leather upholstery in any colour you like. However you compose it, with its elegant black cross-foot, Pause is sure to be the highlight of your living room.

Unique functionality

Tucked away accessories and discreet features make Pause what it is: the ideal lounge chair. An extra lumbar cushion for more support, heating to relax your tired back or literally an extra push in your back to stand up? Pause has it all.

With subtle touch-sensitive buttons, you can control this design furniture easily. Combine Pause with one- or two-seater Enjoy and your living room gets an instant upgrade.

Defect or malfunction?

All Tuoi products have an extremely long lifespan, yet defects or malfunctions are possible. We are happy to assist you with this thanks to rapid technical support. We aim to answer each request within two working days.

Please contact Tuoi's technical department on +32 51 48 92 58 or mail@tuoi.be.

Correct use of the lounge chair

These instructions are intended for the safety and comfort of everyone using this lounge chair. Follow them closely.

- The Pause lounge chair is not a medical device.
- The Pause lounge chair is designed for just one person. The maximum working load is 110 kg.
- The leg and back support is not a sitting area, sitting on these areas can damage the mechanics and cause the lounge chair to tilt.
- Leave enough space around the lounge chair before you unfold the leg rest and/or recline the backrest.
- When leaving the lounge chair, make sure there is enough space under the leg support, the back support is upright and the leg support is fully retracted.
- Only use a dry cloth to clean electrical components. Never use water when cleaning electrical components.
- Always perform an opposite movement if body parts, power cable or other objects are stuck between the moving parts of the lounge chair.
- Not suitable for outdoor use
- The maximum noise level of the Pause relax is 70 decibels.
- Make sure that the Pause relax is always disconnected from the power when you want to clean it.
- Only trained personnel may carry out maintenance and repairs on the adjustment mechanism.
- Always move the lounge chair with two people.




ATTENTION!

Do you use a model with a rechargeable battery? Make sure that the battery is always sufficiently charged before using the lounge chair. This prevents the battery from draining when the lounge chair is in the lounge position (with back down).




Adjustment mechanisms

MODEL POW3 – Continuous operation of back and leg support with stand-up power-lift

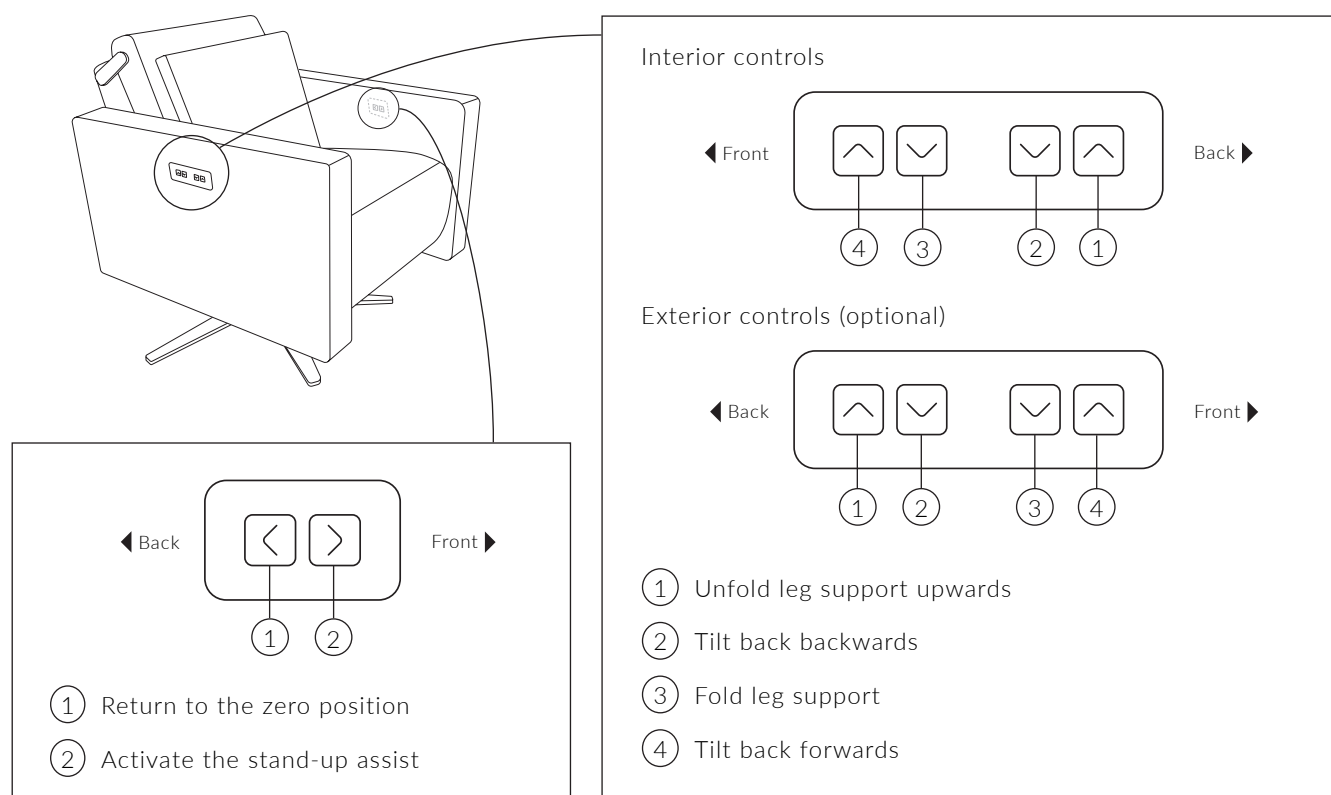


MODEL EL 2 – Continuous operation of back and leg support


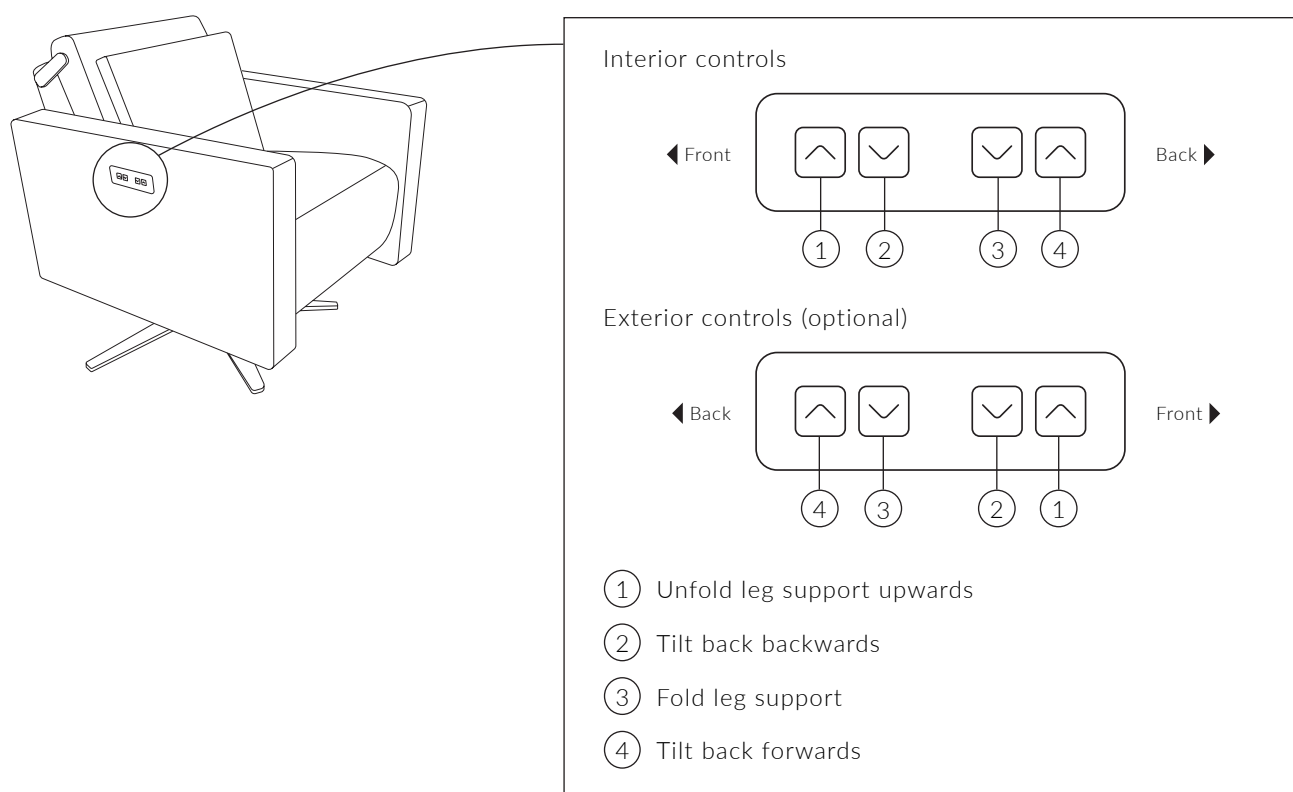


**ATTENTION!**


Make sure that the lounge chair has enough free space all round so that it cannot be damaged when moving and cannot damage the immediate surroundings.

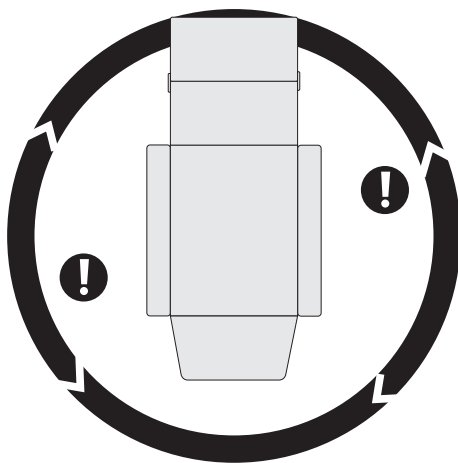**ATTENTION!**

Make sure that the lounge chair does not stand below or above objects, walls or other obstructions to prevent obstruction and damage to the lounge chair.

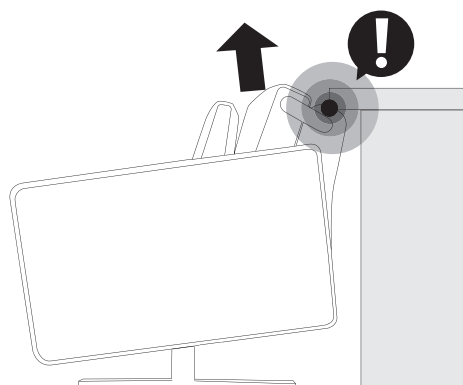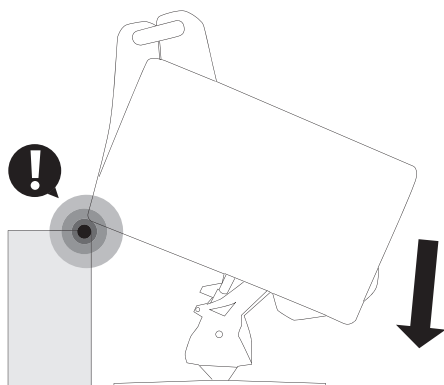
**ATTENTION!**

Do not place limbs between the back and the side walls when changing the position of the back.

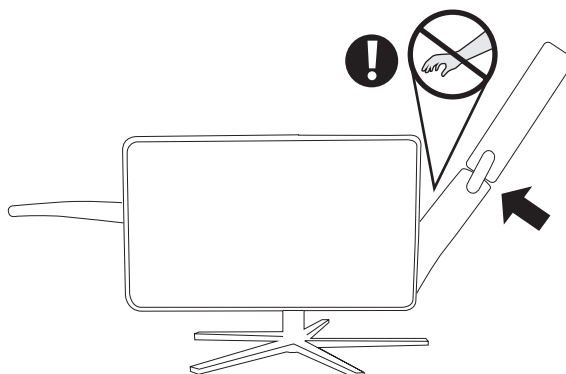


OPENING AND FOLDING THE BACK

Hold the back with both hands to open and fold it with a rotating motion.

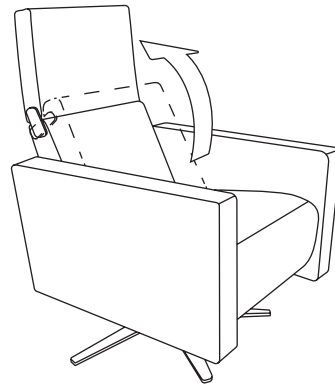


CONNECTING TO THE GRID / CHARGING THE BATTERY

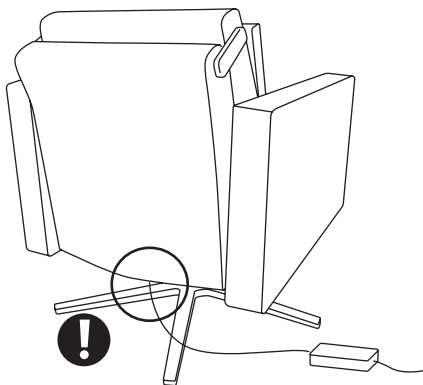

Electric version with power cable

Connect the power cable with the adapter to the protruding socket at the back, in the centre at the bottom of the lounge chair.

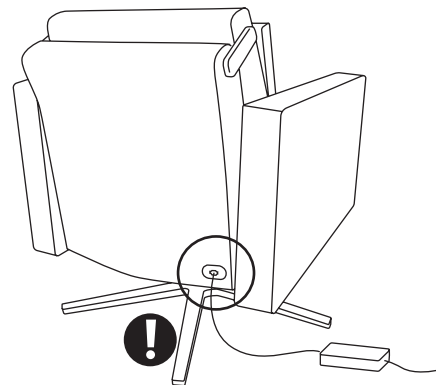

Electric version with integrated battery

When the integrated battery is almost empty, the adjustment of the lounge chair will be slower. Supply the integrated battery with power through the power cable for charging.

With the Pause lounge chair with integrated battery, the power cable with adapter is connected to the socket at the back, at the bottom right of the lounge chair.



ATTENTION!

Make sure that the power cable is not clamped under the metal star base or other objects in the vicinity of the lounge chair!




ATTENTION!

Use the motors for a maximum of two minutes with a rest period of 18 minutes afterwards for optimum life of the electric adjustment mechanics.

Integrated heating

The Pause lounge chair can optionally be fitted with integrated heating. To do this, fold open the back of the lounge chair and the integrated heating is located in the lower back. Use the remote control to turn the heating on or off and select the intensity. The heating switches itself off automatically after an hour and a half of operation.

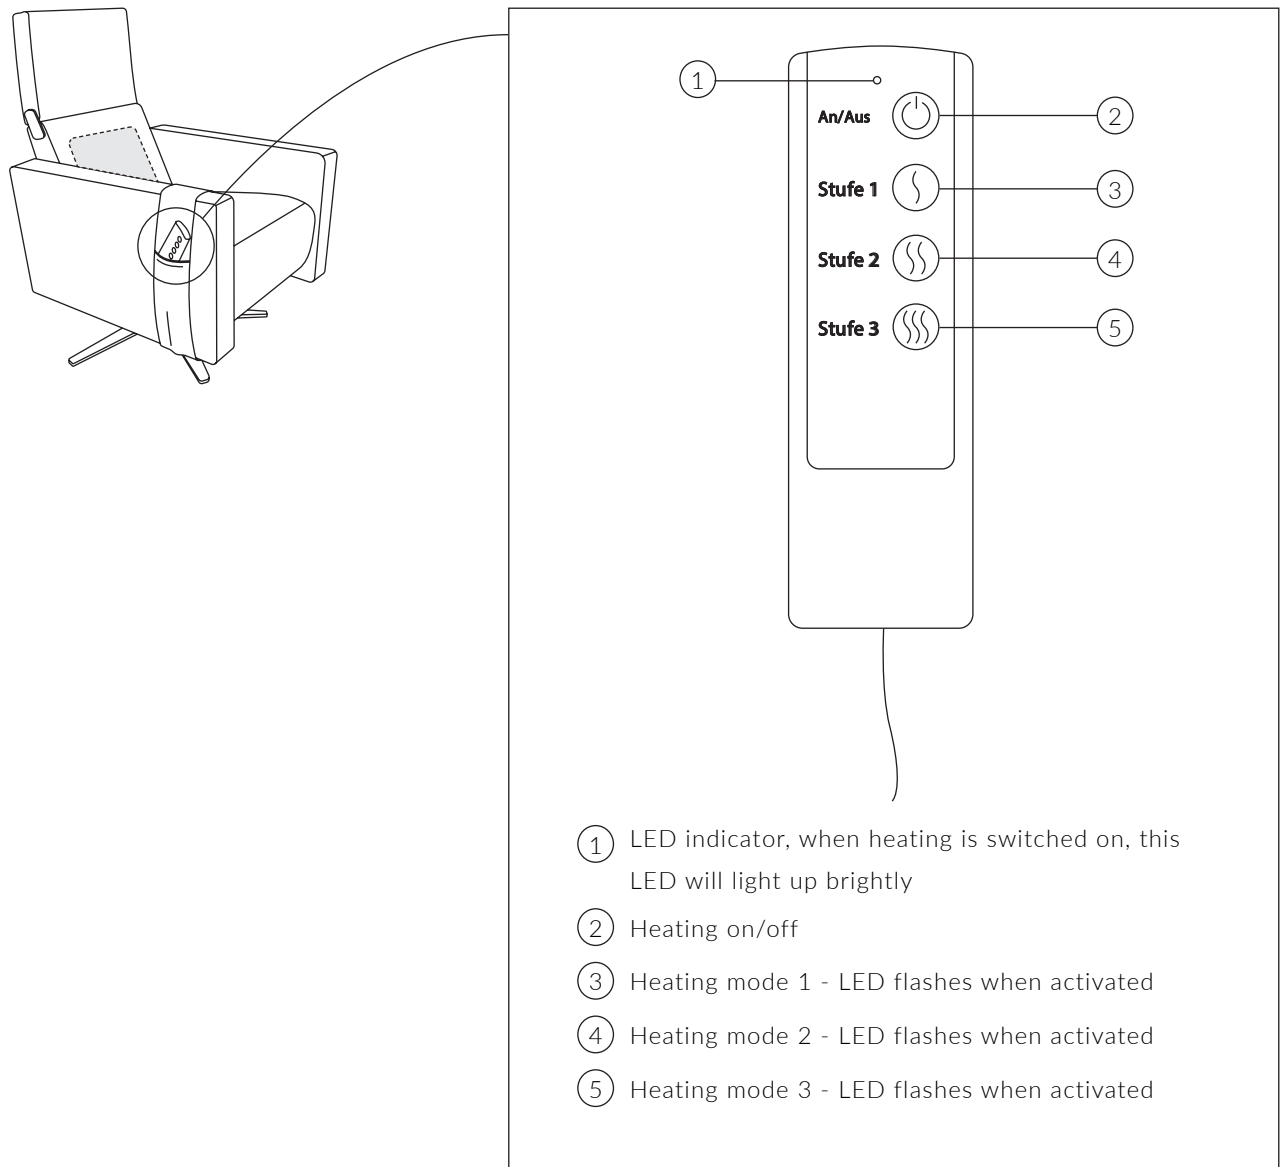


ATTENTION!


- Never leave the heating on when there is no one is in the lounge chair.
- Make sure that the heating is not switched on accidentally.
- The heating may only be used with the back folded open, as shown above in the illustration, and may therefore not be used when the back is folded down.
- When heating is activated, the chair may not be covered with cushions, blankets or other objects.

Wiring diagrams


MODEL POW3

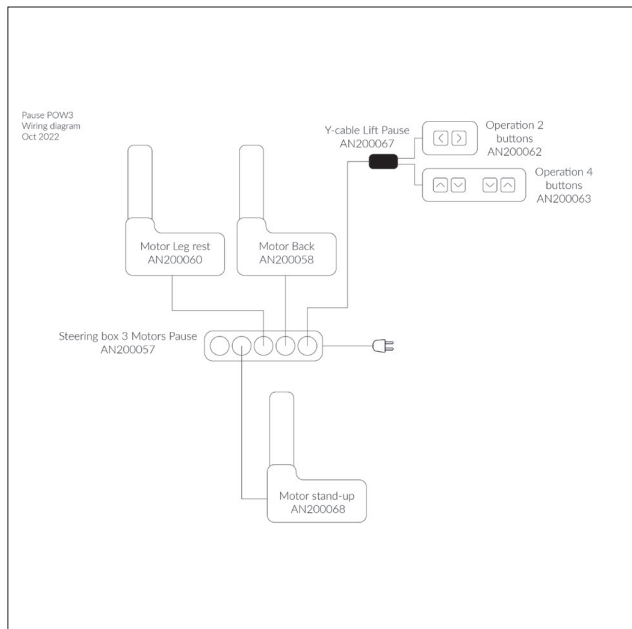


MODEL POW3 – INTEGRATED HEATING OPTION

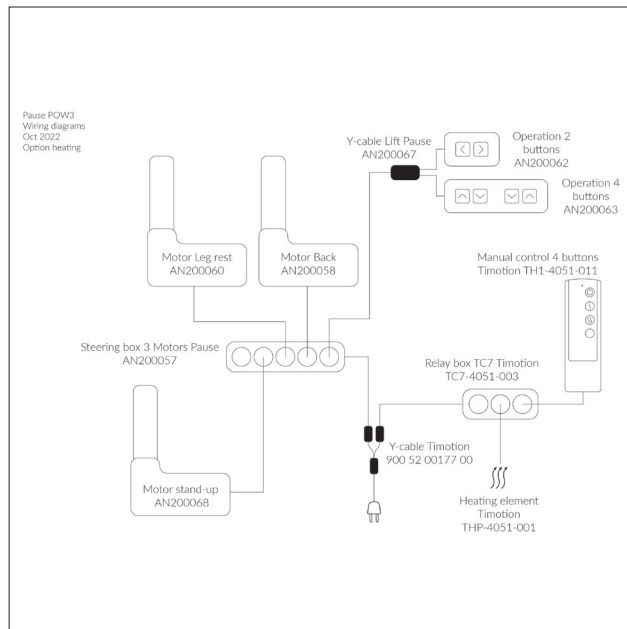


MODEL POW3 – BATTERY OPTION

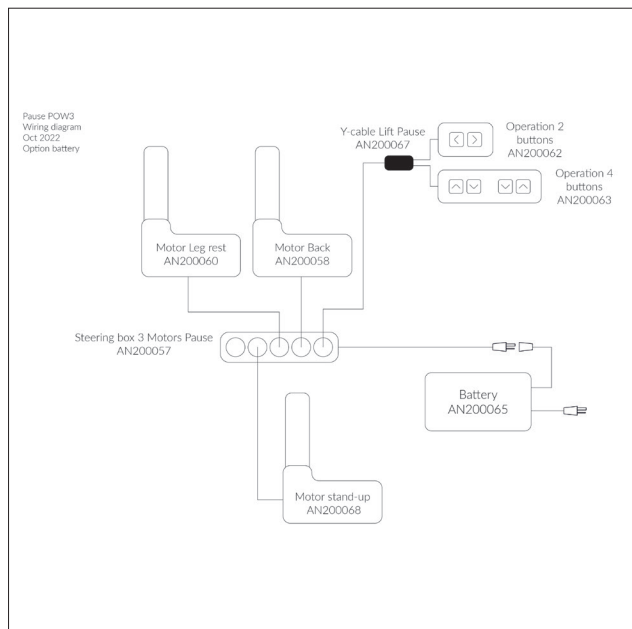


MODEL EL2

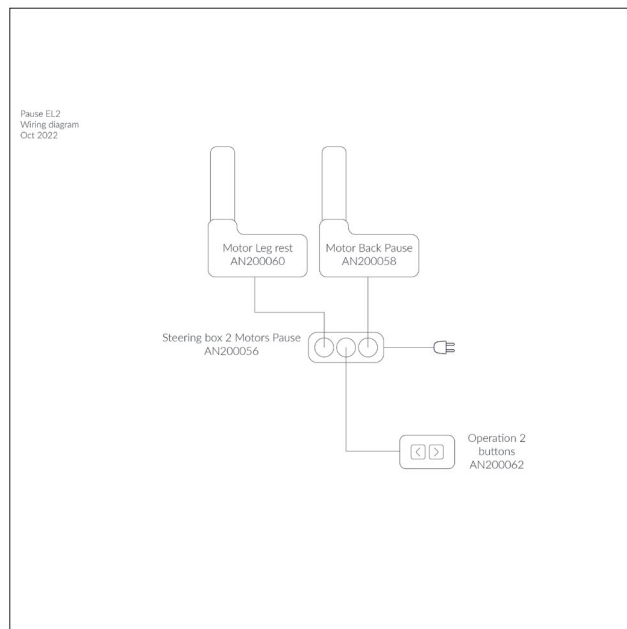

MODEL EL2 – INTEGRATED HEATING OPTION

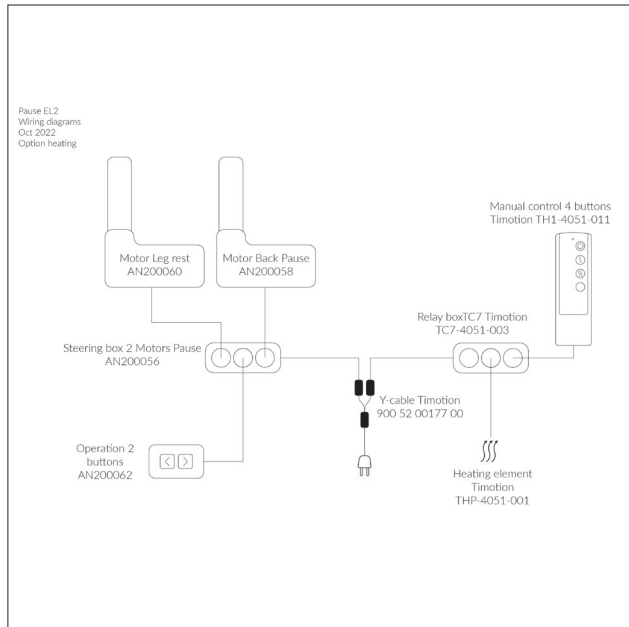

MODEL EL2 – BATTERY OPTION

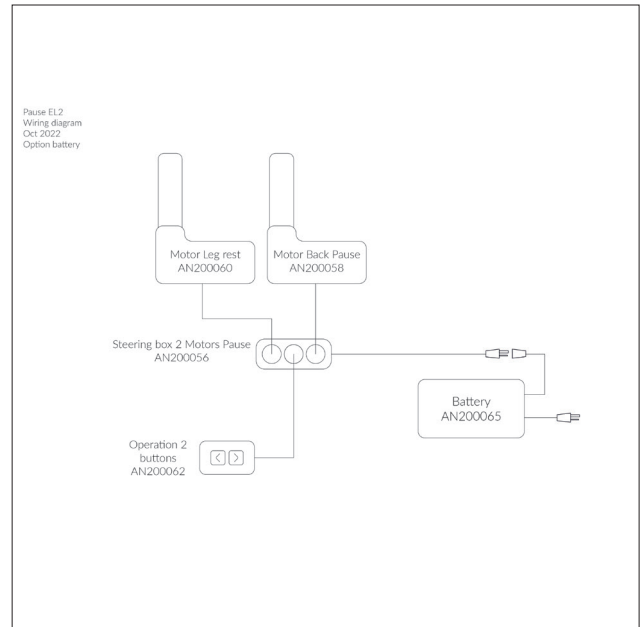

EC declaration of conformity



Translation of original statement

EC declaration of conformity

in accordance with Annex II.1.A of the Machinery Directive 2006/42/EC

MOMENTS FURNITURE NV

**Deefakkerstraat 2
8770 Ingelmunster
Belgium**

We, MOMENTS FURNITURE NV, hereby declare that the machine, described as:

Trade description:	Relax seat
Function:	Automatically adjustable relax seat
Model / Type:	Relax – Pause
Serial number:	VO-XXXXX

complies with all applicable provisions of the Machinery Directive 2006/42/EC, as last amended.

We also declare that the above machine complies with the applicable provisions of the EMC Directive 2014/30/EU, **as last amended**;

The following harmonised standards have been applied:

- **EN ISO 12100:2010:** Safety of machinery - General principles for design - Risk assessment and risk reduction

Authorised compiler of the technical file:

Mr:	<i>Joren De Temmerman</i>
Function:	<i>Senior product design engineer</i>
Address:	<i>Deefakkerstraat 2, B 8770 Ingelmunster</i>

Certificate of conformity for the Machinery Directive 2006/42/EC obtained from Vincotte with No. Z23-619-999A

Name: : Peter Sarasyn

Location: Ingelmunster

Function: : CEO

Date: 06/12/2022

Signature:

A handwritten signature in blue ink, consisting of a large loop followed by a series of smaller, fluid strokes.



huoi

Tuoi after-sales service

+32 51 48 92 58 — mail@tuoi.be

Deefakkerstraat 2, B-8770 Ingelmunster